

**Process:** When any shower is turned on the diversion valve will open diverting to the holding tank. When all showers are turned off the diversion valve will close and all rain water will flow to storm water. The system operates automatically on the available water supply (no reliance on electric). This is achieved by the demand valve installed prior to the wash down points.

**Wastewater Diversion Systems Inc**


(804) 730-1280  
 8418 Erle Rd  
 Mechanicsville, VA 23116

WDS-1005

(WDS Contamination Shower System - Model WDS 2X2 TriPlex Layout)

8/23/2023

SEK

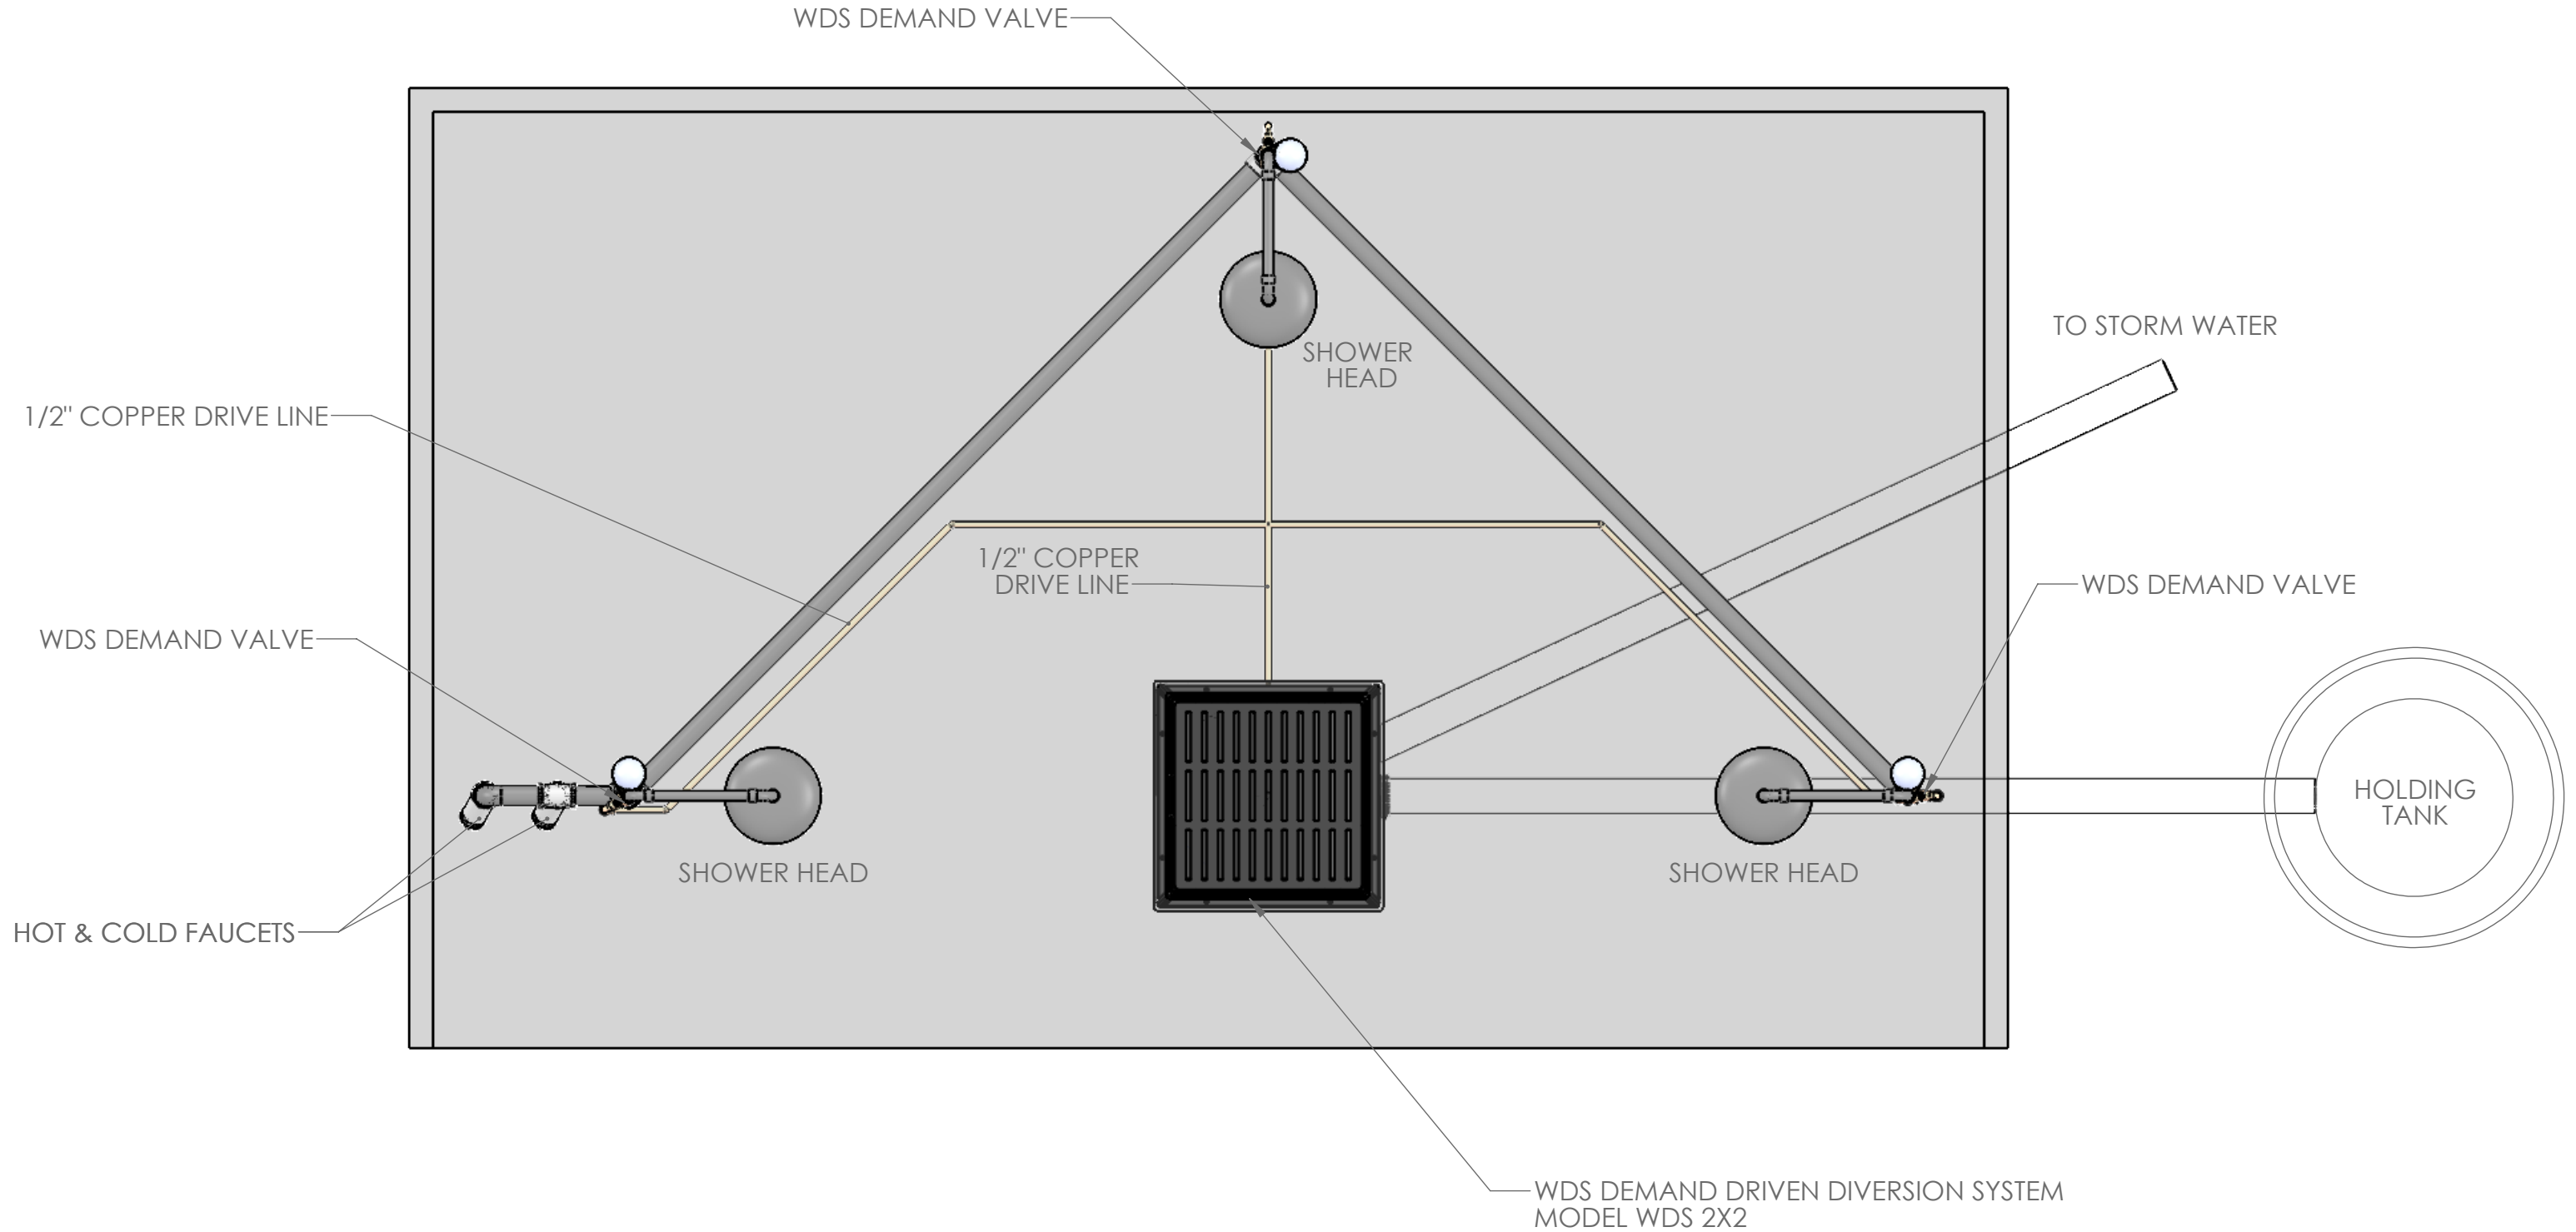

**Wastewater Diversion Systems Inc**  
 (804) 730-1280  
 8418 Erle Rd  
 Mechanicsville, VA 23116

WDS-1005

(WDS Contamination Shower System - Model WDS 2X2 TriPlex Layout)

8/23/2023

SEK